

# Matrix Control Software

# **Operation** manual

Version 1.5.11.5 2015/12/15

www.BlueEyes.com.tw



# **Operation** manual

#### BlueEyes Matrix

Thank you for using the product of BlueEyes Technology.

The manual will introduce the product of BlueEyes Technology. Please read the manual before you start using the product.

Though the information in the manual has been verified before publish, the actual specification should be based on the actual shipment. BlueEyes Technology doesn't have to guarantee, proclaim or declare for the content, along with other purpose. In addition, the product specification and information that mentioned in the manual is for reference only. The content might be update at any time without notice. If there is any mistake of the information, including software, firmware, and hardware that mentioned in the manual BlueEyes Technology has no responsibility for the mistake.

Please reach BlueEyes website to get the upgrade of the product specification, our company will not notice you. If you want to get the latest product information, operation manual, firmware, or you have any question to the products of BlueEyes Technology, please contact your local agent or go to the official website of BlueEyes Technology for further information.

It is not allowed to copy/ use the content or to change the information and publishing of the manual without BlueEyes Technology's written consent.

Copyright 2015 BlueEyes Technology Inc. All Rights Reserved.

#### BlueEyes Technology Corp.

Add: 7F-3, No.200, Sec. 4, Wenxin Rd., North District, Taichung City 40462, Taiwan TEL: +886 4 2297 0977 / +886 982 842 977 Fax: +886 4 2297 0957 E-mail : support@blueeyes.com.tw Website: www.BlueEyes.tw



# Index


1. Preparation	3
1.1 Composition	3
1.2 Compatibility list	3
1.3 Settings of iCam/ iCam PRO	4
2. Installation	5
2.1 Install interface	5
2.2 Perform interface	7
3. Manipulation	9
3.1 Live-view	10
3.2 Settings	10
4. PT	11
4.1 Rotation	11
4.2 Speed of rotation	11
4.3 Preset point	12
5. ePTZ	13
5.1 Zoom	13
5.2 Rotation	13
5.3 Home	14
5.4 Preset technology	14
6. Q&A	16
【Question 1】How many Matrix or computer can per iCam/ iCam PRO support?	16
【Question 2】Does recording quality be influenced by Matrix?	16

# 1. Preparation

Before using Matrix control software, please check hard ware first.

# 1.1 Composition

Matrix can support up to 6 iCam/iCam PRO. Following is the composition of Matrix.

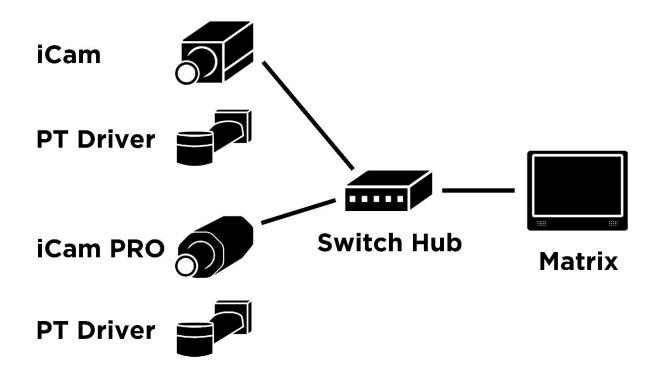

For iCam/iCam PRO, please visit:


http://blueeyes.com.tw/iLearning\_iCam.php

For PT Driver, please visit:

http://blueeyes.com.tw/iLearning\_iCam.php#tabs-8

### 1.2 Compatibility list

Matrix can support iCam, iCam PRO and PT Driver. Different collocations will result in different compatibilities.

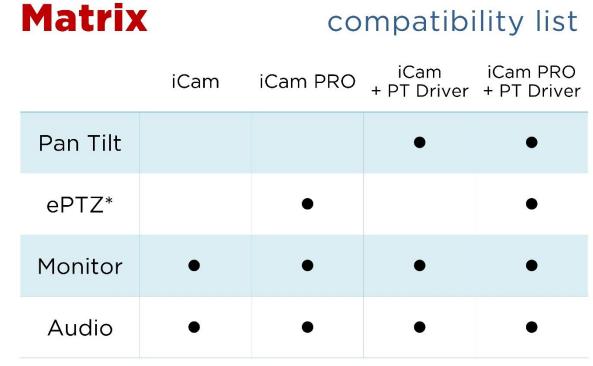

\* Resolution: 1280x720 pixel

#### 1.3 Settings of iCam/ iCam PRO

Please set stream 2 for iCam/ iCam PRO and leave stream 1 for SES. Because stream 2 is VGA and resolution is lower than stream 1. If you need resolution for 1080p when you switch to full screen mode. You can set stream 1 for Matrix as well.

Before using ePTZ function of iCam PRO. Please set resolution 1280\*720 for iCam PRO (default value is 1920\*1080) and select for stream 1 to enable ePTZ.

# 2. Installation

Matrix will start to install after downloading.

#### 2.1 Install interface

Step 1: click folder Matrix and select 【Matrix\_TotalSetup.exe】.

名稱	修改日期	類型	大小
REC-H	2015/11/6下午0		
Matrix_TotalSetup.exe	2015/11/9 上午 1	應用程式	1,545 KB
🖄 KCIVIICrobogSetup.aii	2007/12/7 下午 0	應用程式擴充	2,994 KB

Step 2: enter Matrix installation window and click [next].

岁 Matrix	_			×
選擇安裝資料夾				
安裝程式將安裝 Matrix 至下列資料夾。				
若要在此資料夾中安裝,請按 [下一步]。若要安裝至不同的資料夾, 料夾位置或按 [瀏覽]。	請花	E下列	方塊輸	入資
 資料夾(E):				
C.\Program Files (x86)\BlueEyes Technology\Matrix\		瀏	遭(R)	
		磁碟	空間(D)	)
為您自己或此電腦的所有使用者安裝 Matrix:				1
○所有使用者(E)				
●僅自己(M)				
取消 <上一步(	B)		下一步(	N) >

Step 3: select install location, and default folder is [ C:\Program Files (x86)\BlueEyes Technology\Matrix\].

p Matrix	_		×
選擇安裝資料夾			
安裝程式將安裝 Matrix 至下列資料夾。			
若要在此資料夾中安裝,諸按 [下一步]。若要安裝至不同的資料夾 料夾位置或按 [瀏覽]。	,請在「	下列方塊載	俞入資
資料夾(E):			
C:\Program Files (x86)\BlueEyes Technology\Matrix\		瀏覽(R)	
	ō	凝碟空間(D	)
為您自己或此電腦的所有使用者安裝 Matrix:			
○所有使用者(E)			
◉僅自己(M)			
取消 <上一步	(B)	下一步	(N) >

#### Step 4: click [next] to install.


붱 Matrix	_	□ ×
確認安裝		
安裝程式已經準備好在您的電腦上安裝 Matrix。		
請按 [下一步] 開始安裝。		
	_	
取消 <上一	步(B)	下一步(N) >

Step 5: after installation, click [ close ]



#### 2.2 Perform interface

Step 1: click [start] and select [all program], you can find Matirx under BlueEyes Technology.

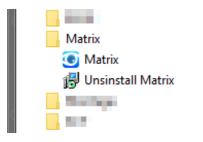

Step 2: you can book Matrix on function bar.

<b>開啟(O)</b> 疑難排解相容性(Y)	
新選到工作列(K) 釘選到 [開始] 功能表(U)	
還原酱版(V)	
傳送到(N)	Þ
剪下(T) 複製(C)	
刪除(D) 重新命名(M)	
內睿(R)	

Step 3: click to perform Matrix.

<b>Matrix</b>	
1000	
	_
▶ 所有程式	
搜尋程式及檔案	٩

# 3. Manipulation

There are three parts in Matrix. Live-view, settings and manipulation.



А	Shows the live-view of camera 1 to 6.
В	Settings, including full monitor, camera settings, Matrix version and shut down button.
С	Manipulation, including PT and ePTZ.

## 3.1 Live-view

It shows the live-view of each classroom.

#### 3.2 Settings

Settings, including full monitor, camera settings, Matrix version and shut down button.



Make the monitor with red light full screen, click left button of mouse to cancel full screen.

Related settings of iCamV3/iCam PRO, including enable, IP, Port, Username, Password, Stream and Model



Version of Matrix



Shut down Matrix

# 4. PT

PT is stand for Pan (left and right) and Tilt (up and down). Use pan tilt driver and change the camera

sight during recording. The functions of PT includes rotation, rotate speed and preset point.

#### 4.1 Rotation

Click  $\lceil up \rfloor$ ,  $\lceil down \rfloor$ ,  $\lceil left \rfloor$  and  $\lceil right \rfloor$  to make it rotate.



#### 4.2 Speed of rotation

Select the speed of rotation to meet your needs. There are three types of speeds you can select. From left to right is 6 degrees/sec, 12 degrees/sec and 20 degrees/sec.





We recommend you select to slow speed when you need to record lecture from far distance; record lecture from near distance use fast speed.

#### 4.3 Preset point

Preset technology provides preset point for you. You can set some specific views as preset points and then click preset point, pan tilt driver will automatically turns to the points you set. PT built-in eight points preset control.



If you want the view turn to preset point 1. Go to  $\ensuremath{\,^{\lceil}}\ensuremath{\,GO}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{$ 



# 5. ePTZ

The function of ePTZ includes rotation, zoom, home point and preset point.



Only iCam PRO supports ePTZ. Before enable ePTZ function, resolution of iCam PRO should be 1280x720.

#### 5.1 Zoom

When using ePTZ, please zoom the channel first and then rotate. Digitally controlled 10 level digital

zoom.



#### 5.2 Rotation

You can have different kinds of rotation direction by using ePTZ, such as, up, down, left, right, upper

left, lower left, upper right and lower right.



#### 5.3 Home

Click home can return to home point. Home point can be only one. Moreover, it will return to the original

view which without zoom or rotation.



#### 5.4 Preset technology

ePTZ built-in eight points preset control.

If you need to add current view for preset point 1, go to  $\mbox{\ }^{\Gamma}\mbox{\ }$  Set  $\mbox{\ }$  and click  $\mbox{\ }^{\Gamma}\mbox{\ }1$  .



If you want the view turn to preset point 1. Go to  $\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\^{\lceil}}\ensuremath{\,^{\lceil}}\ensuremath{\^{\lceil}}\ensuremath{\,$ 



# 6. Q&A

# [Question 1] How many Matrix or computer can per iCam/ iCam PRO support?

【Answer】 When SES/SES One is not working, per iCam/ iCam PRO can support two Matrixs or computers. When SES/SES One is working (no matter record the lecture or not), per iCam/ iCam PRO can only support one computer or Matrix.

# [Question 2] Does recording quality be

#### influenced by Matrix?

[Answer] If the connector with per iCam/ iCam PRO do not more than 2, it won't influence recording quality.

Note


Note




http://www.BlueEyes.com.tw